

Account Creation

Step 1

Create your Velocity IoT account, go to www.velocityiot.net

Step 2

Activate your SIMs. Enter your 18 digit ICCID



Step 3

Select your ONeRATE pool group and select your plan.



Your Velocity IoT account was successfully created!
To get started activate your first SIM.

Add your ONeSIM™	Select your ONeRATE™ Pool	Select your Rate Plan	Monthly
893571100xxxxxxxxx	Select one	Select one	
ICCID	Select one	Select one	
ICCID	Select one	Select one	
ICCID	Select one	Select one	

+ SIM ICCID

Multiple SIMS? Request an [import](#).

Available Coverage Areas ▾

Pooling Capabilities ▾

[Review](#)

Note: To see the coverage available for each pool group please click on the drop down menu. If your country is not available on the list please contact support@velocityiot.io

Device Setup

Step 1

Make sure to set the following items for connectivity on your Device or module:

- Use the APN: **flolive.net**
- Enable **Roaming**
- Set the module to **data centric**

Since these are multi-carrier SIMs it is best not to limit the Cellular Module Bands

Step 2

Insert the SIM card in your device and get started!

Support

For support contact support@velocityiot.io
or post a ticket on our support desk

Additional SIMs may be ordered through Velocity in bulk via purchase order or with our distribution partner Digi-Key :
Velocity IoT on www.digikey.com