

RF1-01A-D-00-75-M	**BNC RA PCB jack, 75 Ohm	RF2-100D-T-00-50-G-HDW-RP	**SMA RA Reverse Polarity PCB Jack, 50 Ohm
RF1-01K-D-00-50-BK-HDW	**BNC RA PCB jack, 50 Ohm	RF2-143-T-17-50-G	**SMA Str PCB end launch Jack, 50 Ohm
RF1-07-T-00-75	**BNC Vert PCB Jack, 75 Ohm	RF2-145A-T-17-50-G-HDW	**SMA Str PCB end launch Jack, 50 Ohm
RF1-03B-D-02-50	BNC Str Plug for RG174, 50 Ohm	RF2-152-T-00-50-G-HDW	**SMA Vert PCB jack, 50 Ohm
RF1-03-D-20-50	BNC Str Plug for LMR240, 50 Ohm	RF2-154-T-17-50-G	**SMA Str PCB end launch Plug, 50 Ohm
RF1-03-T-02-50	BNC Str Plug for RG174, 50 Ohm	RF2-155-T-00-50-G	**SMA Str 4 Hole end launch PCB edgemount Jack, 50 Ohm
RF1-03-T-03-75	BNC Str Plug for RG179, 75 Ohm	RF2-156-T-00-50-G	**SMA Str 2 Hole end launch PCB Jack, 50 Ohm
RF1-04A-D-02-50	BNC STR Bulkhd Jack for RG 174, RG 178, RG 316, 50 Ohm	RF2-17A-T-17-50-G	**SMA Str PCB end launch Jack, 50 Ohm
RF1-03-A-04-75	BNC Str plug for RG59, 75 Ohm	RF2-17-T-17-50-G	**SMA Str PCB end launch Jack, 50 Ohm
RF1-08-D-00-50-HDW	BNC Str Bulkhd Jack isolated ground, solder type, 50 Ohm	RF2-44A-T-00-50-G	**SMA Str 2 Hole PCB end launch Jack, 50 Ohm
RF1-08-T-14-50	BNC Str Bulkhd Jack isolated ground, solder type, 50 Ohm	RF2-44B-T-00-50-G	**SMA Str 2 Hole PCB end launch Jack, 50 Ohm
RF1-106-D-00-50-HDW	BNC Str Bulkhd Jack , solder type, 50 Ohm	RF2-49B-T-00-50-G-HDW	**SMA RA PCB Jack, 50 Ohm
RF1-17-D-04-75	BNC Str Plug, twist on type, 75 Ohm	RF2-04-T-00-50-G	**SMA Vert PCB Jack, 50 Ohm
RF1-26-T-02-50	BNC RA Plug for RG174, 50 Ohm	RF2-06A-T-21-50-G	SMA Str Bulkhd Jack for RG178, 50 Ohm
RF1-44-D-AS-50-HDW	BNC Jack to Jack inline adapter with hardware, 50 Ohm	RF2-153-T-02-50-G	SMA RA Plug for RG174, RG 316, 50 Ohm
RF1-44-D-AS-75-HDW	BNC Jack to Jack inline Panel adapter with hardware, 75 Ohm	RF2-01A-02-50-G	SMA RA Plug for RG174, RG316, LMR-100, 50 Ohm
RF1-50-D-04-75	BNC Str plug for RG59, 75 Ohm	RF2-06A-T-02-50-G	SMA Str Bulkhd Jack for RG174, RG316, LMR-100, 50 Ohm
RF1-51-T-02-50	BNC Str 4 Hole Panel Jack for RG316, 50 Ohm	RF2-05-T-08-50-G	SMA Str 2 hole Panel Jack for RG113, 50 Ohm
RF1-99-D-AS-50	BNC Jack to Jack inline adapter, 50 Ohm	RF2-02B-T-02-50-G	SMA Str Plug for RG55, RG 143, RG223, RG 400, 50 Ohm
RF12-05A-T-00-50-G	**MMCX Str PCB edgemount Jack, 50 Ohm	RF3-04A-T-00-50-G	**SMB RA PCB Plug, 50 Ohm
RF12-07H-T-00-50-G	**MMCX Vert PCB Jack, 50 Ohm	RF3-04-T-00-50-G	**SMB RA PCB Plug, 50 Ohm
RF12-07E-T-00-50-G	**MMCX Vert PCB Jack, 50 Ohm	RF3-05-T-00-50-G	**SMB Vert PCB Jack, 50 Ohm
RF12-25A-T-00-50-G	**MMCX Str PCB edgemount Plug, 50 Ohm	RF3-06-T-00-50-G	**SMB RA PCB Jack, 50 Ohm
RF12-35A-T-00-50-G	**MMCX Str PCB edgemount Plug, 50 Ohm	RF3-15-T-00-50-G	**SMB Vert SMT PCB Jack, 50 Ohm
RF12-35-T-00-50-G	**MMCX Str PCB edgemount Plug, 50 Ohm	RF3-34-T-00-50-G	**SMB Vert PCB Jack, 50 Ohm
RF12-41-T-00-50-G	**MMCX Vert SMT PCB Jack, 50 Ohm	RF3-46-T-00-50-G	**SMB RA PCB Jack, 50 Ohm
RF12-06-T-02-50-G	MMCX Str Plug for RG 174,RG 316, LMR-100, 50 Ohm	RF3-47-T-17-50-G	**SMB Str PCB end launch Jack, 50 Ohm
RF12-08A-T-21-50-G	MMCX RA Plug for RG178, 50 Ohm	RF3-45-T-00-50-G-HDW	SMB Str Blkhd Jack solder type, 50 Ohm
RF12-06-T-21-50-G	MMCX Str Plug for RG 178, 50 Ohm	RF3-02-T-08-50-G	SMB Str Blkhd Jack for RG405 semi flex, 50 Ohm
RF12-08B-T-02-50-G	MMCX RA Plug for RG174, RG316, LMR-100, 50 Ohm	RF3-03-T-03-75-G	SMB RA Plug, 75 Ohm
RF2-03E-T-00-50-G	**SMA RA PCB Jack, 50 Ohm	RF4-01-T-00-75	**F Type, RA PCB Jack, 75 Ohm
RF2-19A-T-00-50-G	**SMA Vert PCB Jack, 50 Ohm	RF4-89-X-05-75	F Type Str Plug, twist on , 75 Ohm
RF2-03N-T-00-50-G-RP	**SMA RA Reverse Polarity PCB Jack, 50 Ohm	RF5-01-T-01-50	N Type Str Plug for RG58 knurled collar, 50 Ohm
RF2-03-T-00-50-G	**SMA RA PCB Jack, 50 Ohm	RF7-11-T-02-50	TNC Blkhd Jack for RG316, RG174, RG188, 50 Ohm
RF2-04A-00-50-G	**SMA Vert PCB Jack, 50 Ohm	RF9-01-D-01-50	Mini UHF Str Plug for RG58, 50 Ohm